


$\frac{3}{16}$ " x $1\frac{3}{4}$ " TAPCON ANCHOR. USE THRESHOLD AS TEMPLATE FOR DRILLING $\frac{5}{32}$ " x 2" HOLE. CAULK WELL AROUND ANCHORS PRIOR TO INSTALLING THRESHOLD WITH K1115P CAULKING.

REVISIONS	BY
06/03/11	RAP
07-25-11	KRK
09-28-11	TLC

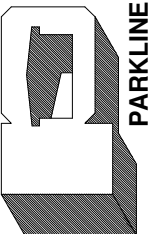

PARKLINE, INC
P O Box 65 Winfield, WV 25213
phone: (304) 586-2113

JOB DESCRIPTION	WALK DOOR THRESHOLD INSTALLATION FOR 3" DOOR FRAME ONLY
SHEET TITLE	DETAILS

DATE	04-08-11
DRAWN BY	RAP
SCALE	N.T.S.
ORDER NO.	
REVISION	3

WD3-THRSHD