

DOOR WEATHERSTRIPPING DETAIL


WEATHERSTRIPPING INSTALLATION

- STEP 1.** CUT WEATHERSTRIPPING TO LENGTH AS REQUIRED.
- STEP 2.** CUT AROUND ANY DOOR BOLTS OR PLATES AS NEEDED.
- STEP 3.** ATTACH WITH STANDARD SELF DRILLING SCREWS PROVIDED USING PRE-DRILLED HOLES IN WEATHERSTRIPPING AS TEMPLATE.

NOTE:

INSTALLATION AT DOOR HEADER (NOT SHOWN) IS THE SAME AS SHOWN ON JAMBS.

REVISIONS	BY
07-22-11	RAP
09-28-11	TLC

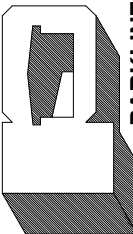

PARKLINE, INC
P O Box 65 Winfield, WV 25213
phone: (304) 586-2113

JOB DESCRIPTION	WALK DOOR WEATHERSTRIPPING INSTALLATION FOR 3" DOOR FRAME ONLY
SHEET TITLE	DETAILS

DATE	03-28-11
DRAWN BY	RAP
SCALE	N.T.S.
ORDER NO.	
REVISION	2

WD3-WS