



NOTE:
526A TRIM IS TO BE FIELD CUT TO PROPER LENGTH AND HEIGHT. ATTACH TO INSIDE TOP OF ROOF CURB WITH K1324 FASTENERS.




FIELD CUT 470A INSIDE CORNER TRIM (NOT SHOWN) AND ATTACH TO INSIDE CORNERS WITH K1324 FASTENERS.

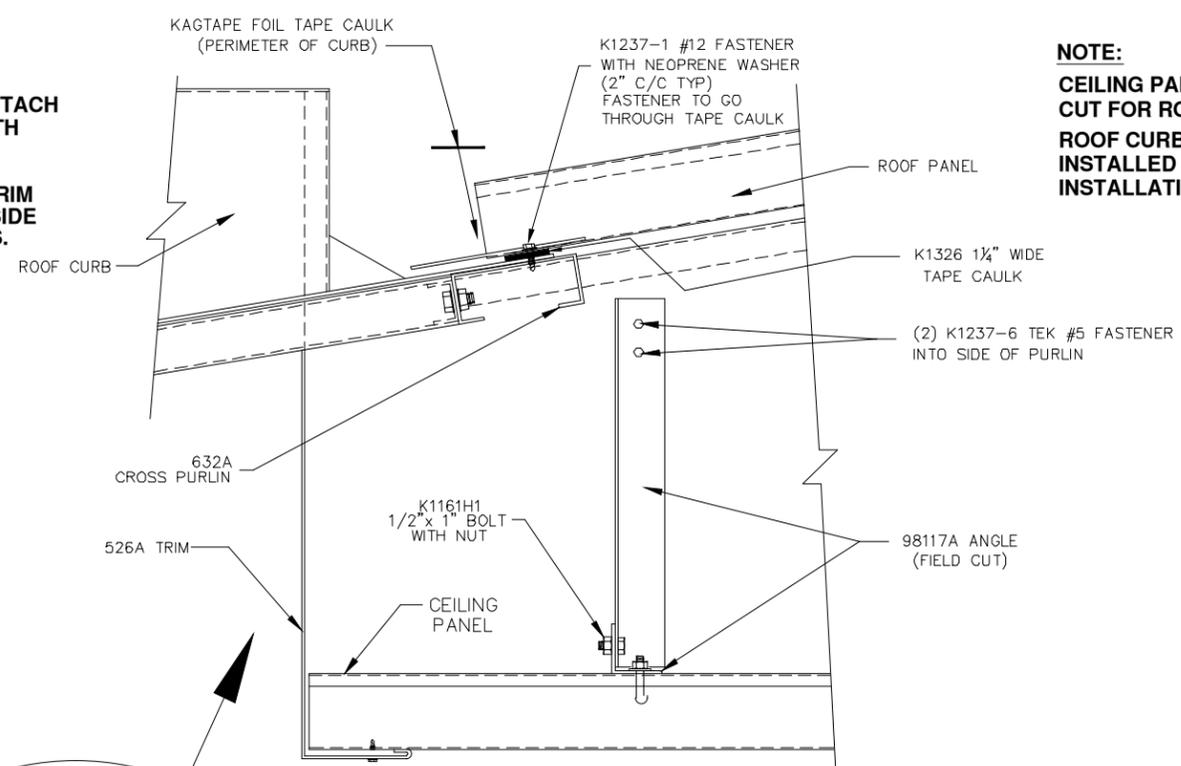

NOTE:
CEILING PANELS MUST BE FIELD CUT FOR ROOF CURB OPENING. ROOF CURB FRAMING MUST BE INSTALLED PRIOR TO CEILING INSTALLATION.

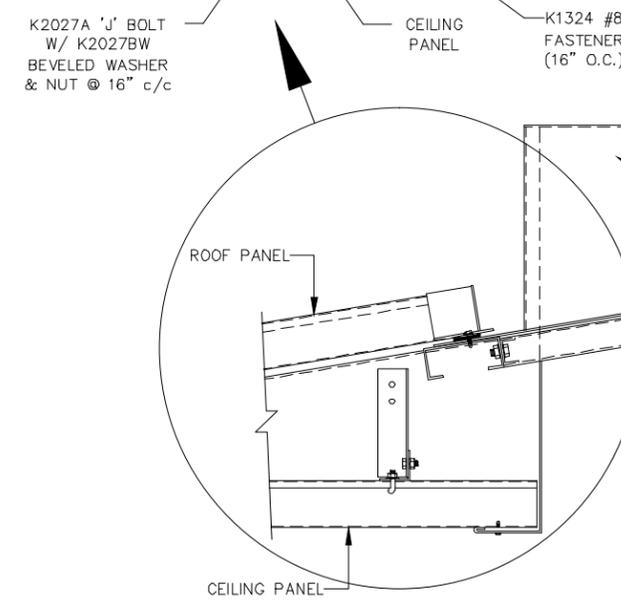

SECTION A

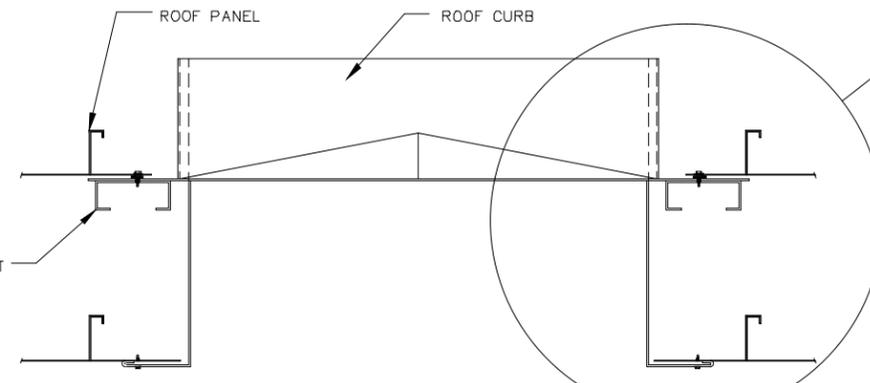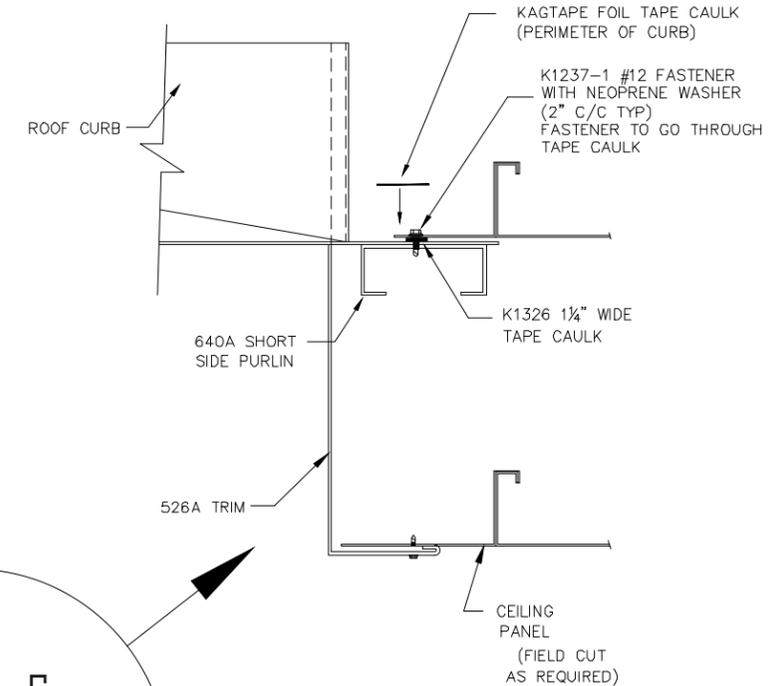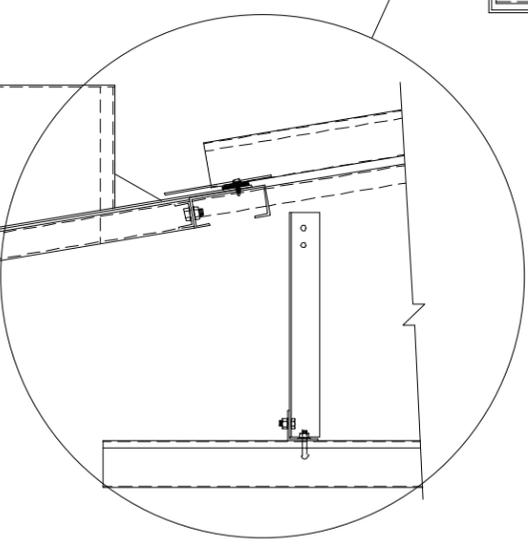


SECTION B

NOTE:
REFER TO (DRAWING CURB-AL-1) AND (CURB-AL-2 AND CURB-AL-4) FOR EXTERIOR VIEW AND CUT SECTIONS.

WINDBRACING NOT SHOWN IN SECTIONS FOR CLARITY

REVISIONS	BY
03-07-01	DLR
07-31-01	DLR
03-27-03	DLR
06-09-03	RAP
01-06-05	WBD
03-31-09	JMC

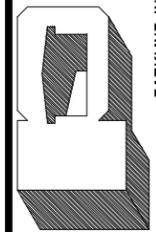

PARKLINE, INC.
 P. O. Box 65 Winfield, WV 25213
 Phone: (304) 586-2113

JOB DESCRIPTION
ROOF CURB INSTALLATION FOR TYPE 'AL' BUILDINGS WITH CEILING

SHEET TITLE
SECTIONS AND DETAILS

DATE	8-8-00
DRAWN BY	DLR
SCALE	NTS
ORDER NO.	
REVISION	6
DWG. NO.	CURB-AL-3