



ELEVATION

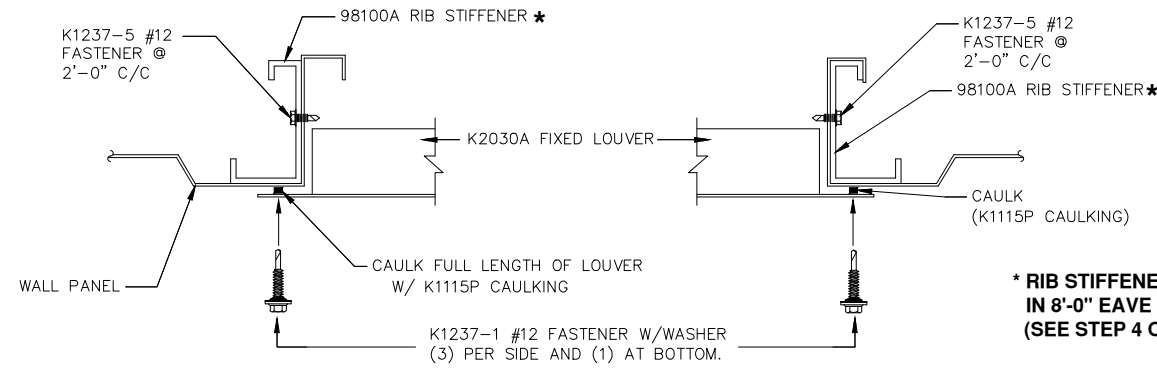


SECTION 'A'

SECTION 'B'


* RIB STIFFENERS NOT REQUIRED IN 8'-0" EAVE HEIGHT BUILDING. (SEE STEP 4 OR 4A)

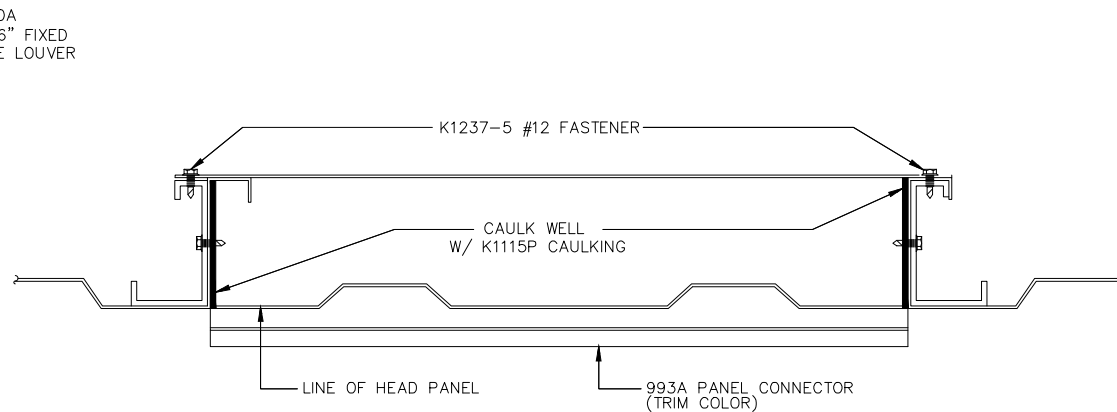


SECTION 'D'-D'

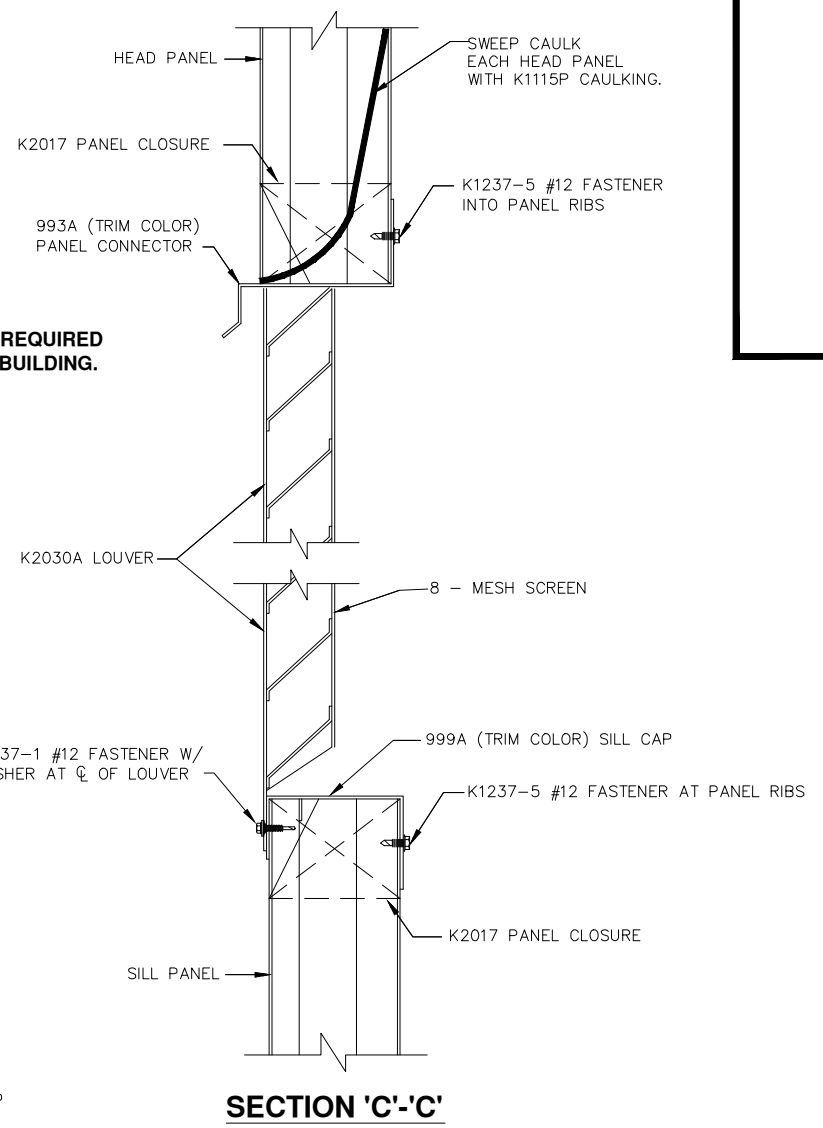

SECTION 'C'-C'

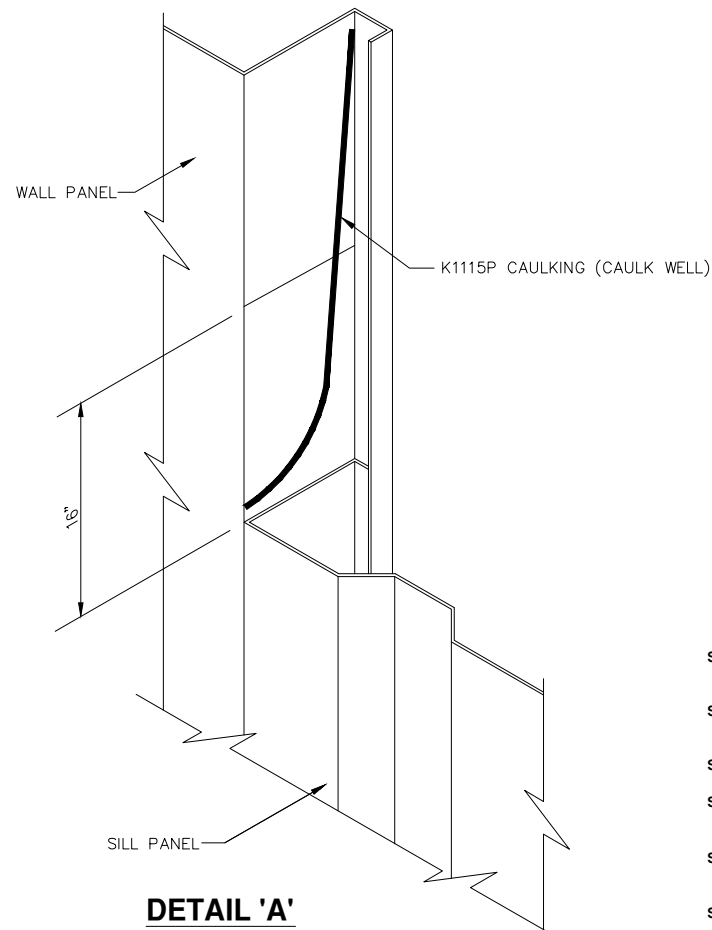


DETAIL 'A'

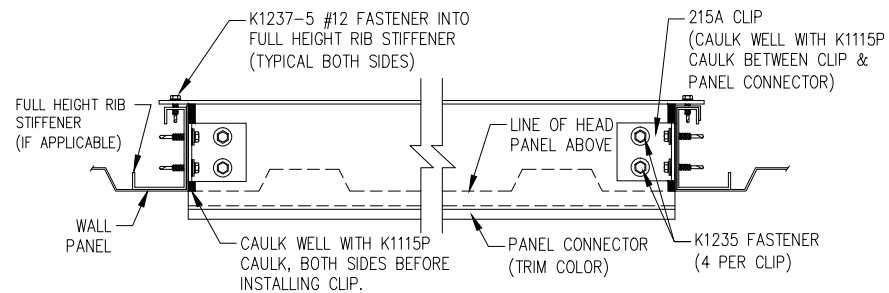

TYPICAL SECTION @ PANEL CONNECTOR

INSTALLATION


- STEP 1. INSTALL SILL PANEL & PLACE SILL CAP OVER SILL PANEL (SEE SECTION 'C'-C')
- STEP 2. CAULK PER DETAIL 'A'. INSTALL HEAD PANEL AND CAULK PER DETAIL 'B'.
- STEP 3. INSTALL NEXT FULL WALL PANEL.
- STEP 4. FOR BUILDINGS WITH 8'-0" EAVE HEIGHT, RIB STIFFENERS ARE NOT REQUIRED.
- STEP 4A. FOR BUILDINGS TALLER THAN 8'-0" EAVE HEIGHT, INSTALL RIB STIFFENERS AND FASTEN PER SECTION 'A' AND 'B'.
- STEP 5. INSTALL PANEL CONNECTOR & CAULK PER SECTION 'D'-D' & TYPICAL SECTION @ PANEL CONNECTOR.
- STEP 6. INSTALL LOUVER PER SECTIONS 'A', 'B', & 'C'-C'.

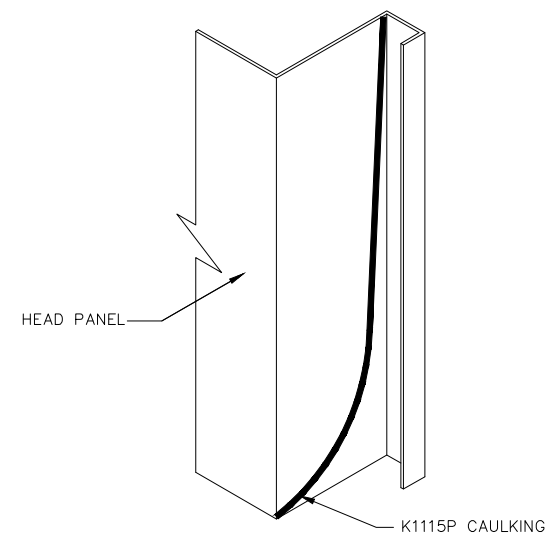

DETAIL 'B'

REVISIONS	BY
02-17-12	TLC
03-09-2012	KRK

PARKLINE, INC.
 RT. 62, ELEANOR INDUSTRIAL PARK
 ELEANOR, WV 25070
 PHONE: 800-786-4855
 FAX: 304-586-3842
 EMAIL: PARKLINE@PARKLINE.COM
 ENGINEER: TOM HARDING
 THARDING@PARKLINE.COM

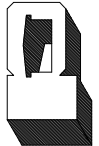

JOB DESCRIPTION
**FIXED WALL LOUVER
 INSTALLATION**

SHEET TITLE
SECTIONS AND DETAILS

DATE	3-15-11
DRAWN BY	CBP
SCALE	NTS
ORDER NO.	
REVISION	2

LVR-FIXED