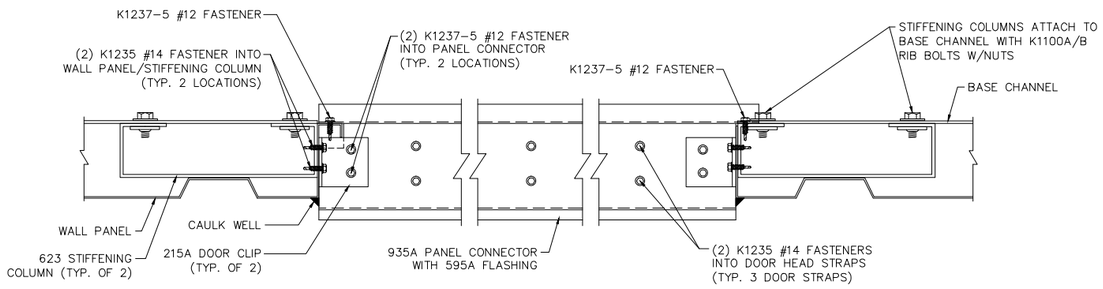

SECTION 'A'-'A'

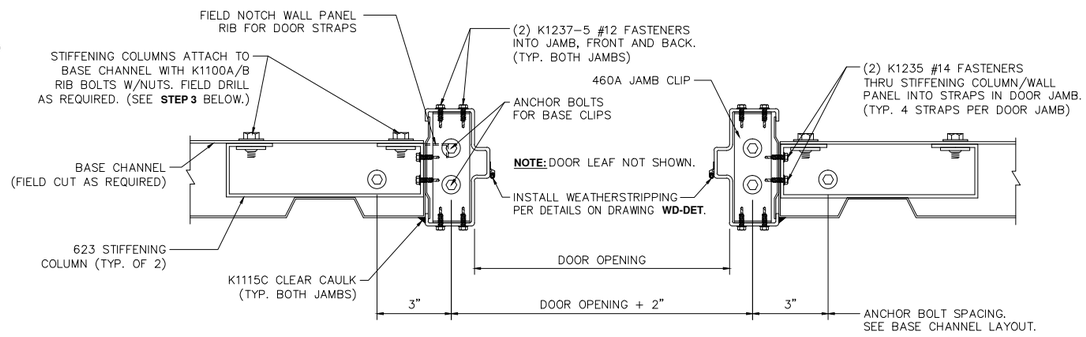

SECTION 'B'-'B'

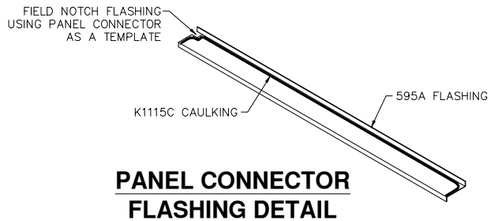

PANEL CONNECTOR FLASHING DETAIL

NOTE:
IF DOOR CLOSER IS TO BE INSTALLED REFER TO DRAWING **WD-CLOS** BEFORE BEGINNING DOOR INSTALLATION.

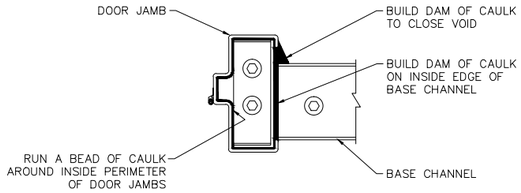

TYPICAL CAULKING DETAIL @ BASE OF DOOR JAMB

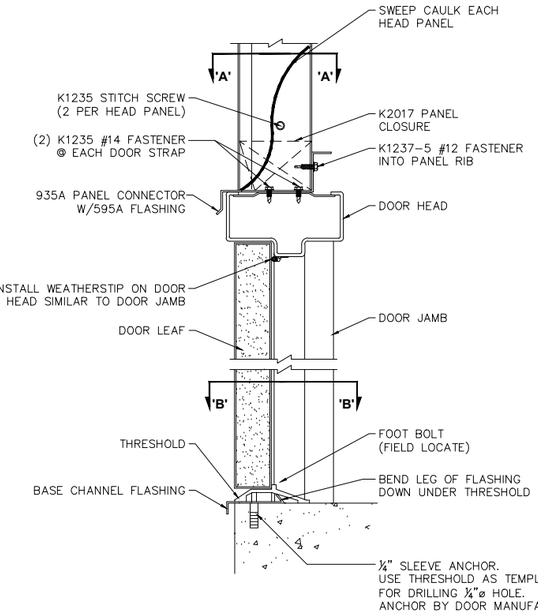

SECTION THRU DOOR

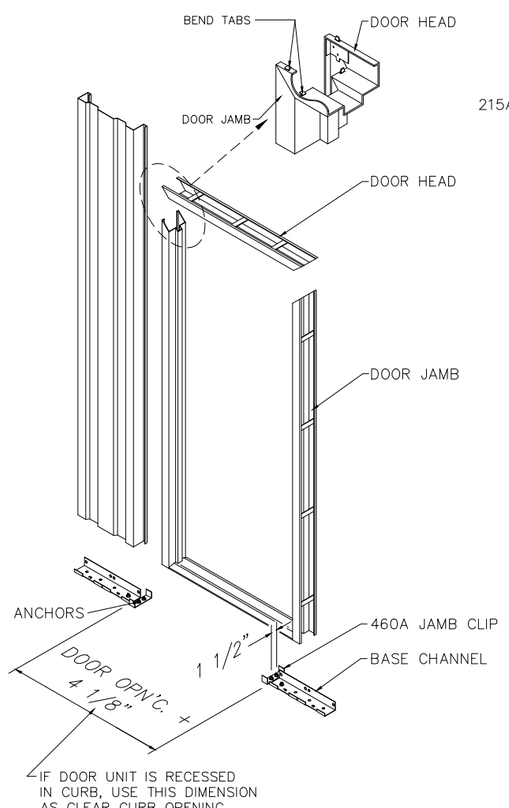

STEP 1.
FASTEN JAMB CLIPS TO FOUNDATION (SEE SECTION 'B'–'B' AND BASE CHANNEL LAYOUT). ASSEMBLE DOOR JAMBS, HEADER, AND THRESHOLD. SET FRAME ASSEMBLY OVER JAMB CLIPS AND FASTEN PER SECTION 'B'–'B'. ATTACH DOOR JAMB TO WALL PANEL WITH K1237–5 FASTENERS THRU DOOR JAMB STRAPS. (SEE SECTION 'B'–'B')

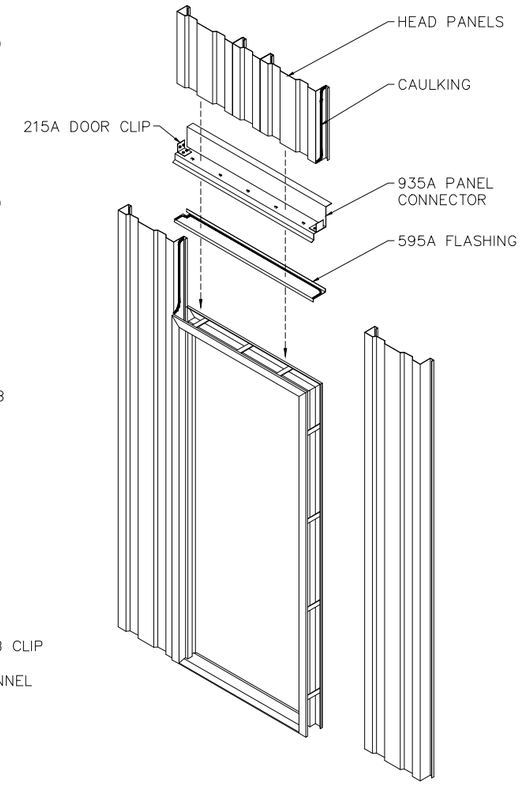

STEP 2.
CAULK PANEL CONNECTOR AND FLASHING PER DETAIL ABOVE. PLACE PANEL CONNECTOR/FLASHING INTO POSITION AND FASTEN TO HEAD. (SEE SECTION 'A'–'A') CAULK FROM TOP OF WALL PANEL TO DOOR HEAD AS SHOWN. PLACE HEAD PANELS INTO POSITION AND FASTEN TO BACK OF PANEL CONNECTOR. (SEE SECTION THRU DOOR) SWEEP CAULK EACH HEAD PANEL AS SHOWN, THEN INSTALL PANEL TO RIGHT OF OPENING.

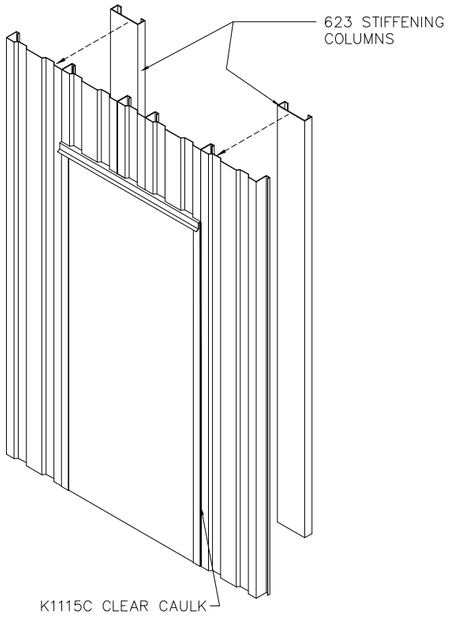

STEP 3.
PLACE STIFFENING COLUMNS IN POSITION AND BOLT TO BASE CHANNEL USING K1100A RIB BOLTS/NUTS. (SEE SECTION 'B'–'B') FASTEN DOOR CLIPS AS SHOWN IN SECTION 'A'–'A'. INSTALL AND ADJUST DOOR LEAVES FOR PROPER OPERATION. SURFACE CAULK DOOR FRAME TO WALL WITH K1115C CLEAR CAULK AS SHOWN IN SECTION 'B'–'B'.

DOOR OPENING SWINGS
AS VIEWED FROM EXTERIOR OF BLD'G

SWING OUT LEFT HAND	SWING OUT RIGHT HAND
(LHSO)	(LHSI)
SWING IN LEFT HAND	SWING IN RIGHT HAND
(RHSO)	(RHSI)

NOTES:
1. SEE FLOOR PLAN FOR ACTUAL DOOR SWINGS.
2. DOOR FRAMING MUST BE INSTALLED AS WALL PANELS ARE ERECTED.
3. DOOR MUST BE INSTALLED SQUARE AND PLUMB.
4. INSTALL WEATHERSTRIP ON DOOR AS SHOWN IN DETAILS ON DRAWING **WD-DET**.
5. CHECK INSIDE DOOR FRAME FOR ADDITIONAL HARDWARE ITEMS SUCH AS KNOBS, ETC.

REVISIONS	BY
06–14–2012	RAP

PARKLINE, INC
P O Box 65 Winfield, WV 25213
phone: (304) 586-2113

JOB DESCRIPTION: **SINGLE LEAF WALK DOOR, IN HIGH VELOCITY WIND AREA**

SHEET TITLE: **INSTALLATION DETAILS**

DATE	07-27-09
DRAWN BY	CEM
SCALE	N.T.S.
ORDER NO.	
REVISION	1

WD-30-HV