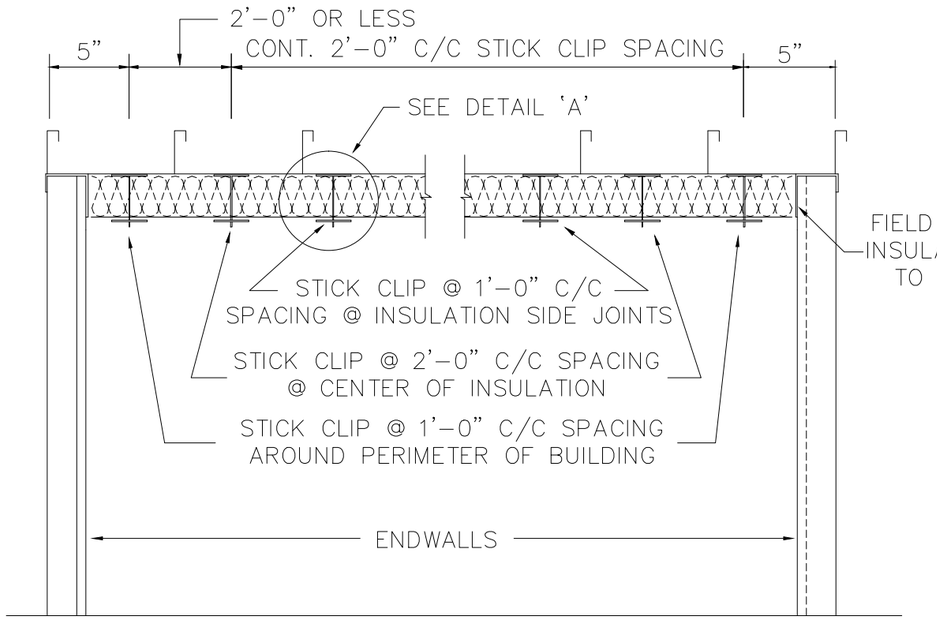

TYPICAL SECTION THROUGH ENDWALLS

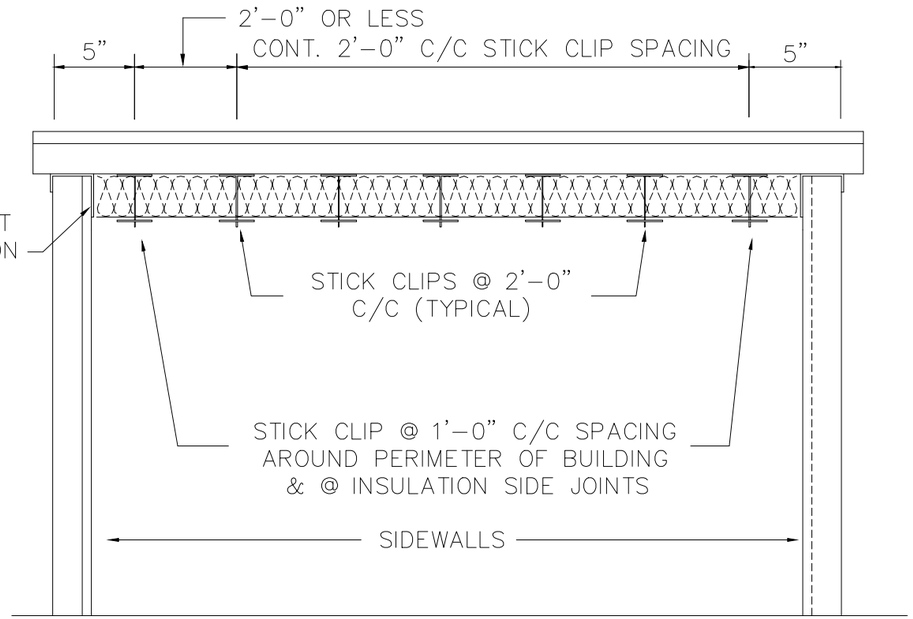

TYPICAL SECTION THROUGH SIDEWALLS

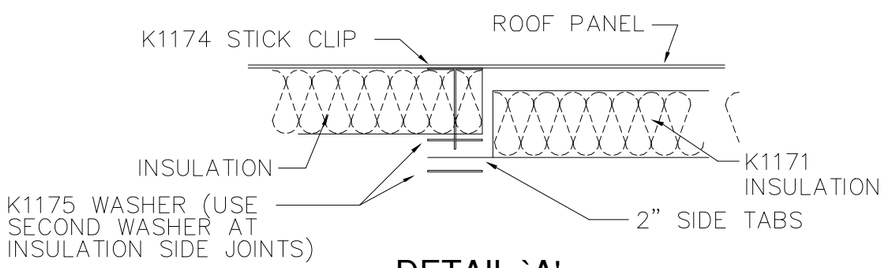

DETAIL `A'

CAUTION !!!

VINYL BECOMES BRITTLE AS THE TEMPERATURE DECREASES. INSTALLING VINYL FACED INSULATION BELOW 40° F MAY RESULT IN CRACKS IN THE FACE AND LOSS OF VAPOR BARRIER.

INSTALLATION INSTRUCTIONS

STEP 1. (GALVALUME ROOF ONLY) BEFORE APPLYING ADHESIVE & STICK CLIPS TO UNDER SIDE OF ROOF PANELS, SPOT CLEAN AREA WITH SOLVENT TO REMOVE OIL FILM FOR PROPER ADHESION.

STEP 2. APPLY STICK CLIPS WITH ADHESIVE TO ROOF PANELS AS SHOWN IN CROSS SECTIONS ABOVE. FOLLOW INSTRUCTIONS ON ADHESIVE CAN FOR PROPER INSTALLATION.

STEP 3. APPLY INSULATION BY STRETCHING TIGHT & IMPALING OVER STICK CLIPS, THEN SECURING WITH PUSH–ON WASHERS. PLACE FIRST STRIP OF INSULATION PARALLEL WITH ENDWALL AND RUN FULL WIDTH OF BUILDING. **NOTE:** INSULATION IS SUPPLIED IN 25'–0" LONG ROLLS. SPLICING OF INSULATION WILL BE REQUIRED ON CERTAIN WIDTH BUILDINGS. INSULATION QUANTITIES ARE DETERMINED SO PIECES OF INSULATION LESS THAN 4'–0" IN LENGTH CAN BE DISCARDED. INSULATION SHOULD BE STRIPPED BACK AT SPLICES TO CREATE A TAB SIMILAR TO SIDE TABS AND SECURED WITH SECOND K1175 WASHER. CONTINUE WITH ADDITIONAL STRIPS IN A SIMILAR MANNER DOWN LENGTH OF BUILDING.

STEP 4. MAKE CUT OUTS IN INSULATION WHERE REQUIRED FOR VENTILATORS, ROOF CURBS OR SKYLIGHTS, AND TAPE RAW EDGES OF CUT OUTS. K1171–TP REPAIR TAPE IS PROVIDED FOR THIS USE AND TO REPAIR ANY DAMAGE TO FACING.

REVISIONS	BY
9–3–98	DLR
1–13–05	WBD
	MYSCALE

PARKLINE, INC.
P O Box 65 Winfield, WV 25213
phone: (304) 586–2113

JOB DESCRIPTION: INSTALLATION OF BLANKET ROOF INSULATION FOR TYPE 'S' AND 'LT' BUILDINGS

SHEET TITLE

DATE	9–27–96
DRAWN BY	KAG
SCALE	N.T.S.
ORDER NO.	
REVISION	2
DWG. NO.	RFINS-S